



# KANOMAX

The Ultimate Measurements

ISO9001 ISO14001



JQA2790




JQA-EM1628

## Digital Dust Monitor Model 3443

### Features

- Particle size range: 0.1 to 10  $\mu\text{m}$
- Measuring range: 0.001 to 10  $\text{mg}/\text{m}^3$
- Data logging up to 100,000 measurements
- Analog, pulse, alarm output
- USB interface for data transfer
- Useful tripod mount
- Rubber protector and Shoulder strap included

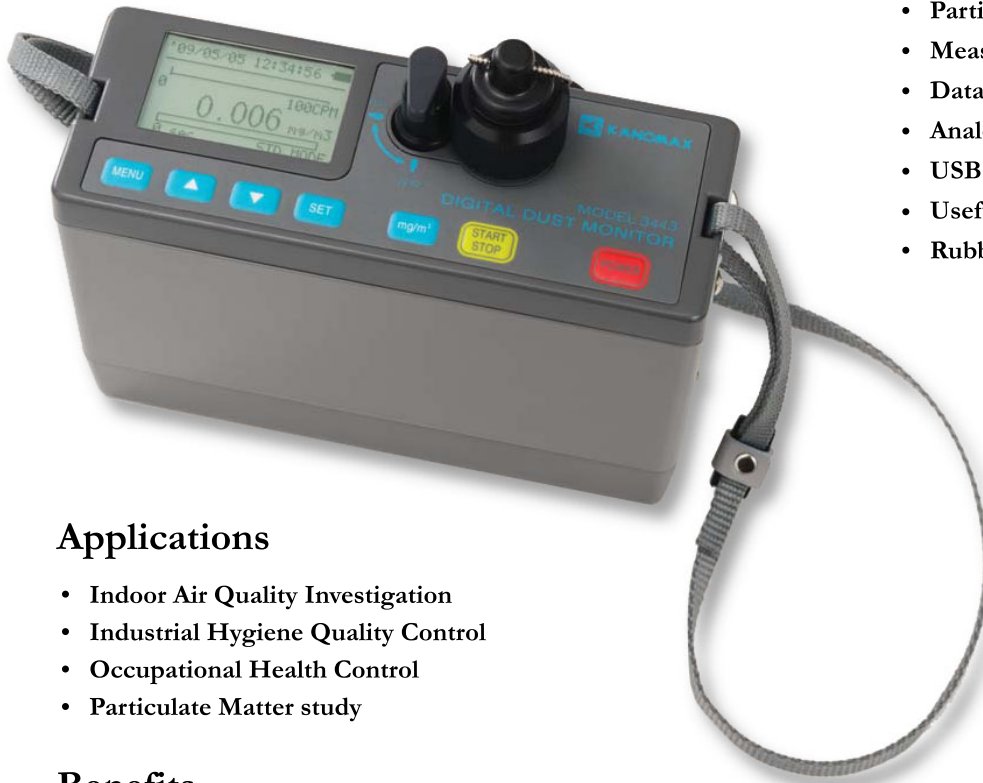

### Applications


- Indoor Air Quality Investigation
- Industrial Hygiene Quality Control
- Occupational Health Control
- Particulate Matter study

### Benefits

- Compact and light weight unit
- Capable of analog and digital output
- More than 24 hours run time

## Dust Monitor Ensures Worker Safety

### Applications

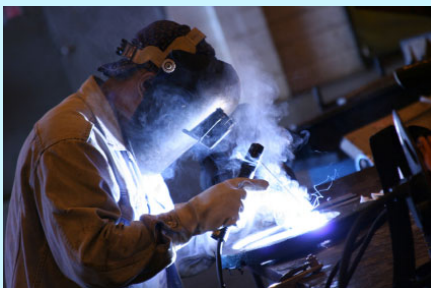

Monitoring worker exposure to airborne contaminants




Particulate Matter study

# Digital Dust Monitor Model 3443

## Specifications

Model	3443
Concentration Measurement Range	0.001 to 10.0 mg/m <sup>3</sup>
Particle Size Range	0.1 to 10 μm
Accuracy	± 10 %FS
Linearity	±5% of the indicated value
Measuring Method	Light Scattering
Light Source	Semiconductor Laser Diode
Detector System	Photodiode
Factor of Mass Concentration Conversion Coefficient	Settable on operation panel (Settable range: 0.1 ~ 9.9, in increments of 0.1)
Flow Rate Range	1L/min
Display	LCD with backlight
Data Log	Up to 100,000 measurements
Output	Analog, Pulse, Alarm Signal
Interface	USB
Power Supply	6 x AA batteries / AC adapter
Dimensions	W 4.3 x D 2.4 x H 6.4 inches (109 x 60 x 162 mm)
Weight (including batteries)	2.9 lb (1.3 kg)
Standard Accessories	Operation Manual, Rubber Cap, Rubber Cap String, LCD Protective Sheet, Filter, AC Adapter, Shoulder Strap, Communication Cable (USB), Measurement Software (for Windows)
Spare Accessories for Purchase	Analog Output Cable, Rubber Protector, Rubber Cap, LCD Protective Sheet, Filter, AC Adapter

\* Specifications subject to change without prior notice

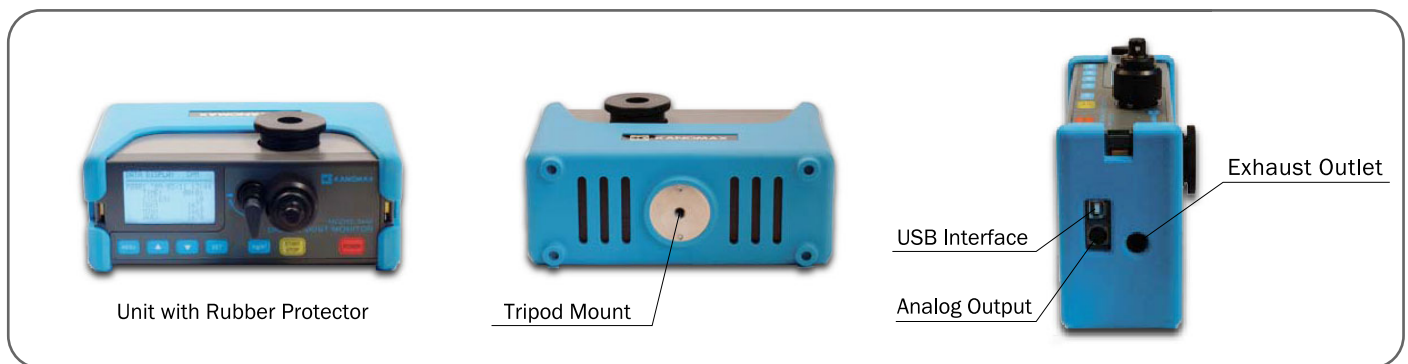

Distributed by:



**ETA Associates**  
 119 Foster Street, Bldg #6  
 Peabody, MA 01960  
 Tel: (978) 532-1330  
 Fax: (978) 532-7325  
 www.ETAassociates.com  
 eta@ETAassociates.com

